



USING OUR KARAOKE JUKEBOXES

When we set the machine up we will need access to mains power supply, **this power supply MUST BE DIRECT to mains** (no power board outlets please) as all machines are computer driven.

If you are also getting our lighting and smoke machine set up, a power supply will also be needed for this.

IMPORTANT: AS ALL KARAOKE JUKEBOXES ARE COMPUTER DRIVEN...NEVER TURN THE POWER SWITCH ON AND OFF REPEATEDLY....Jukeboxes take a few minutes to load****

Now that Get Slush'd have set the Karaoke Jukebox up.
(We will perform steps 1 and 2 when there normally)

1. Plug the unit into a separate mains power outlet.
2. Push the **RED LIGHT** above mains inlet to turn ON. (left side)



WAIT A FEW MINUTES FOR THE MACHINE TO DO A SYSTEMS CHECK AND LOAD
(like a computer NEEDS time)

FRONT PANEL

This panel is where you or your guests can choose those songs from Yester Year or Rage Out Loud with the latest Crowd.

Category Button – Select from Decade to Genre; through to Reggae or Country n Western...EVEN Wedding Music if that's the Deal.



SORT by Tune/Artist – Once you have selected from the Category range, you can filter the list by "Tune" or "Artist". The Filter works Alphanumerical...So 1 to 9, then A to Z.

Alphabetical UP / DOWN – Allows you to SCROLL through the filtered list alphabetically.

Move UP | Move DOWN | SELECT – Scrolls one song at a time <<<Hold button in and after a few seconds will scroll faster>>>. **SELECT** Plays your chosen song.

You Can **PRE-SELECT** up to 20 Songs simply follow above steps then relax and enjoy.

<<**HINT**>> At the back of the unit; top right there is a **White or Coloured BUTTON**, pushing will clear the current song, pushing more will delete from list.




Volume – Volume is controlled from the Back of the machine and is clearly marked.

USE the RCA sockets to plug in your Projector / Screen...or want to connect another speaker? Go ahead. **JUST MAKE SURE IT IS CONNECTED BEFORE WE TURN THE MACHINE ON.**

RANDOM PLAY – Press the <<SELECT>> button on the front panel 10 Times. You should see the word **“RANDOM”** appear in the lower right side of the screen. To Remove random play; press the <<SELECT>> button 10 times again.

iPod | Iphone | Computer – Our machines are fitted with a “smart” 3.5” socket so just PLUG in and PLAY; Located on the right side panel.

PAUSE – Located on the right side panel also. Great for when you Want to make speeches etc. **MUSIC PAUSED** will display onscreen. Push again to let the music play.

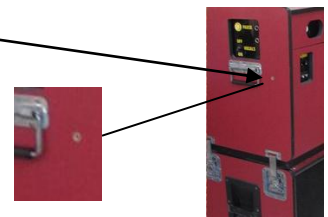

Microphone sockets – Karaoke Jukebox Supplied with 2 microphones.



VOCALS – Turn this ‘ON’ when doing Karaoke It will reduce artist’s volume so your Karaoke singing can stand out.

CORRECT SHUTDOWN – Please turn the Karaoke Jukebox off properly by pressing the **RED LIGHT** above the mains inlet. Remember these are like computers and NEED shutting down correctly.

DO NOT UNPLUG FROM WALL WITHOUT FIRST PUSHING THE RED LIGHT



Computer Freeze? – Computer freeze can happen for a number of reasons; vibrations, bumping the jukebox, not having a direct mains supply can cause this when other appliances or gadgets are used with double adaptors or power boards. Any surges in supply from those “other” plugs could freeze or damage the machine.